

For TH-S VideoEngine3D ALWAYS first use the W600 Video Outputs THEN the Motherboard Outputs !

If you have properly installed your graphics card, operating system messages will appear and the boot procedure will proceed.

Your monitor will be running in a basic (VGA) video mode. Higher refresh rates are not available at this stage of the installation. Once you have installed the AMD FirePro drivers and software, you can use the Windows® **Display Properties** dialog to adjust your video settings and configure multiple monitors.


Proceed to install the software and drivers for your AMD FirePro graphics card.

2.2 Baseplate Connections

The following figures show the display connections available on your graphics card.

Note: Baseplate may not appear exactly as depicted.

Figure 2-2 AMD FirePro W600 Baseplate Connections

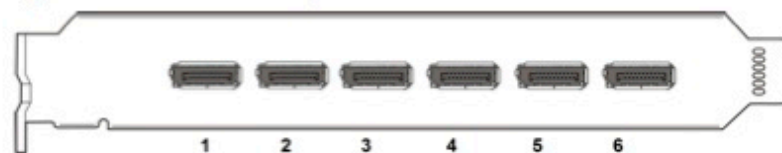

1	Mini-DisplayPort	- User Interface -> must be #1 in CCC
2	Mini-DisplayPort	- Screen 1
3	Mini-DisplayPort	- Screen 2
4	Mini-DisplayPort	- Screen 3
5	Mini-DisplayPort	- Screen 4
6	Mini-DisplayPort	- Spare

**TH-S VideoEngine3D
Setting**

2.3 Display Configurations

The following table lists options for attaching displays that are indirectly supported by the connections on your graphics card.

For best graphics performance and quality, always use native connections, when available.

Note: Adapters not provided with your graphics card can be purchased directly from AMD's Web site or through your local AMD resellers.

Always use ACTIVE mDP adapters for TH-S VideoEngine3D (see next page)

Table 2–1 Sample Display Configurations

Sample Display Configuration	mDP Connector	mDP Connector	mDP Connector	mDP Connector	mDP Connector	mDP Connector	Total Output
mDP-mDP-mDP-mDP-mDP-mDP	Native	Native	Native	Native	Native	Native	6
DP-DP-DP-DP-DP-DP	mDP to DP (A)	mDP to DP (A)	mDP to DP (A)	mDP to DP (A)	mDP to DP (A)	mDP to DP (A)	6
dDVI-dDVI-dDVI-dDVI-dDVI-dDVI	mDP to DVI (A)	mDP to DVI (A)	mDP to DVI (A)	mDP to DVI (A)	mDP to DVI (A)	mDP to DVI (A)	6
VGA-VGA-VGA-VGA-VGA-VGA	mDP to VGA (A)	mDP to VGA (A)	mDP to VGA (A)	mDP to VGA (A)	mDP to VGA (A)	mDP to VGA (A)	6
mDP-mDP-DP-DP-dDVI-VGA	Native	Native	mDP to DP (A)	mDP to DP (A)	mDP to DVI (A)	mDP to VGA (A)	6
DP-DP-DP-DP-HDMI	mDP to DP (A)	mDP to DP (A)	mDP to DP (A)	mDP to DP (A)	mDP to HDMI (P)	No connection	5
dDVI-dDVI-dDVI-VGA-HDMI	mDP to DVI (A)	mDP to DVI (A)	mDP to DVI (A)	mDP to VGA (A)	mDP to HDMI (P)	No connection	5
mDP-mDP-mDP-dDVI-sDVI	Native	Native	Native	mDP to DVI (A)	mDP to DVI (P)	No connection	5
sDVI-sDVI	mDP to DVI (P)	mDP to DVI (P)	No connection	No connection	No connection	No connection	2
HDMI-HDMI	mDP to HDMI (P)	mDP to HDMI (P)	No connection	No connection	No connection	No connection	2

Note: HDMI audio is limited to a single display (the last HDMI device connected).

Adapters not included with your AMD FirePro W600 can be purchased directly from AMD's Web site (<http://www.amd.com>) or through your local AMD resellers.

Active displays will supersede passive displays. For example, if you connect a DisplayPort display to a system that already has two passive single-link DVI displays, one of the single-link DVI displays will deactivate.